

# Ring Binder Carts

## 7100-7200-7300 Series

Models 7100-7150-7160-7200-7240-7300



CUSTOMER INSTRUCTIONS

*PLEASE READ AND FAMILIARIZE YOURSELF WITH ALL INSTRUCTIONS BEFORE USING THIS PRODUCT. If you have trouble understanding these instructions contact your dealer or Winco customer support, (800) 237-3377 before attempting to use this product; otherwise injury may occur.*

***Winco assumes no responsibility for damage or injury caused by the improper assembly, installation or use of these products.***



1. READ AND FOLLOW ALL DIRECTIONS.
2. Caster locks should be used to hold chart cart in place.
3. NEVER place cart on a table, stand or other objects; Cart could fall; INJURY MAY OCCUR.
4. NEVER leave cart in front of a door; During emergency, cart could block or hinder evacuation.
5. DO NOT allow children to play with cart; Cart could tip and INJURY MAY OCCUR.
6. Periodically, recheck tightness of all nuts, bolts and screws.
7. Cart should ALWAYS be positioned on level surface.
8. NEVER stand or ride on cart; This could damage cart; INJURY MAY OCCUR.
9. DO NOT use cart in or with ANY type of vehicle or trailer.
10. DO NOT attach objects to chart cart; Cart can tip over and INJURY MAY OCCUR.
11. Immediately remove from service; Any chart cart with broken or missing parts, or other signs of damage.
12. USE ONLY WINCO AUTHORIZED REPLACEMENT PARTS.
13. SAVE THESE INSTRUCTIONS for future reference and training.

### Tools needed:


- Scissors or box cutter

*PLEASE READ AND FAMILIARIZE YOURSELF WITH ALL INSTRUCTIONS BEFORE PROCEEDING WITH ASSEMBLY*

1. After checking your product for any shipping damage; Remove all packing material and hardware that was secured for shipping. Cut tape and plastic with scissors.


### CASTER INSTALLATION

2. Lay cart on side, on a carpeted (or similar) level surface to protect paint finish.
3. Insert caster stems into ends of cart legs until they snap into place. **(FIG.1)**

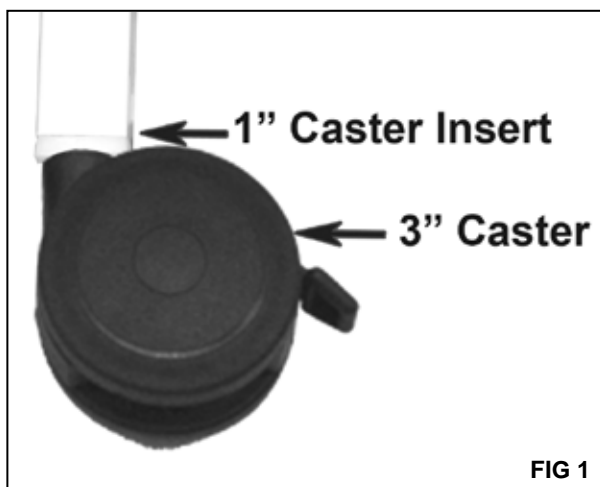

**FIG 1**

# PARTS LIST & REFERENCE GUIDE

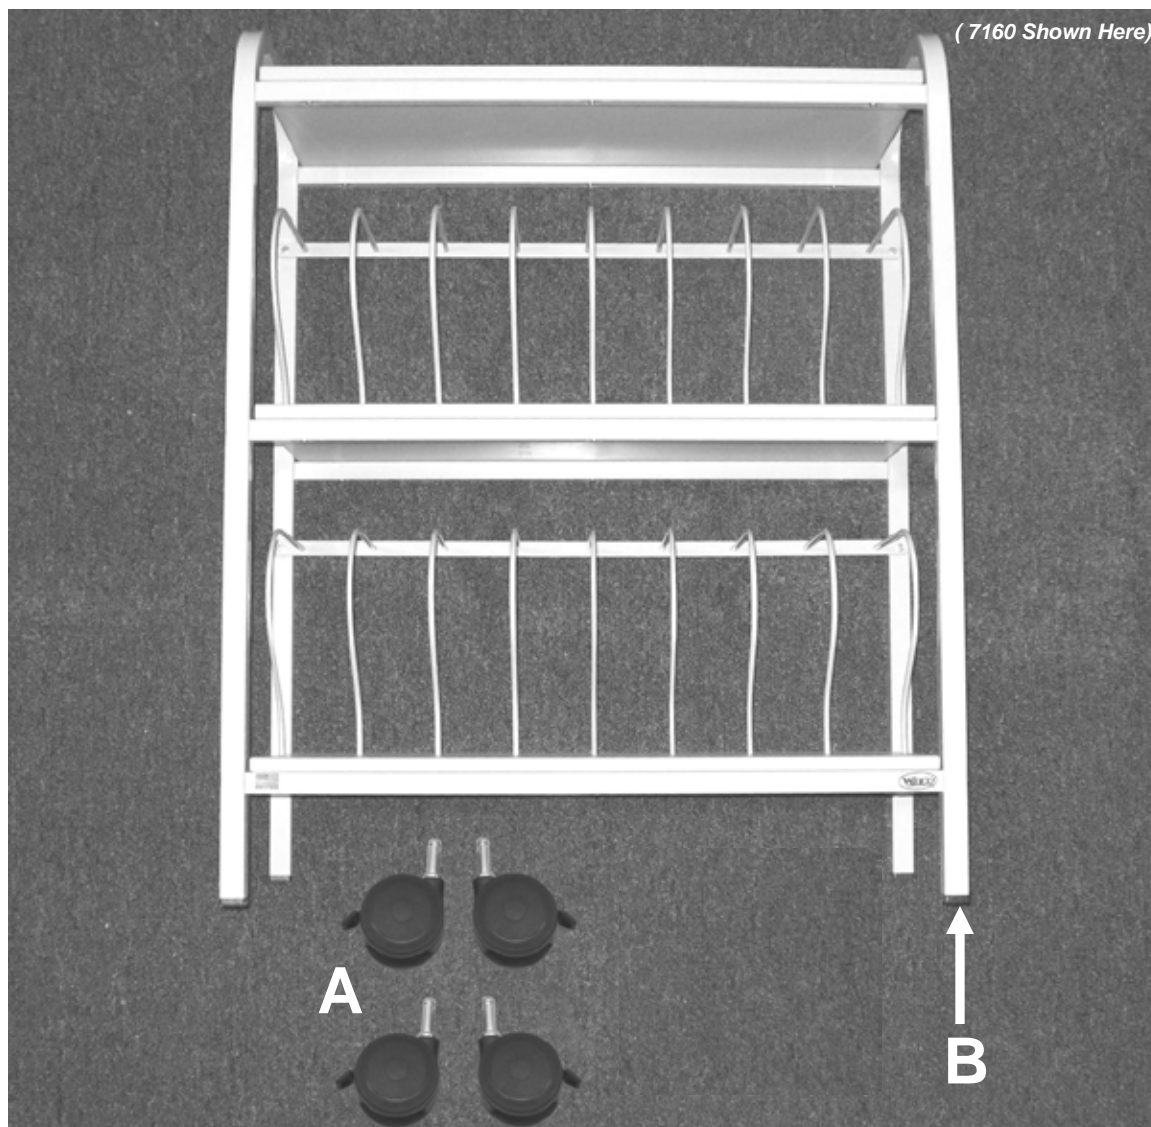

**Items Included with Cart:**

	<b><u>Qty.</u></b>	<b><u>Part number</u></b>
(A) 3" Twin-Wheel Caster, Black	4	400270
(B) 1" Black Caster Insert	4	702270

**FOR ALL OTHER PARTS/QUESTIONS – PLEASE CALL WINCO CUSTOMER SERVICE (800) 237-3377**

**Other Quality Winco Medical Furnishings You May Be Interested In:**



Clinical Recliners




Exam Tables



Convalescent (LTC) Recliners



Ring Binder Carts

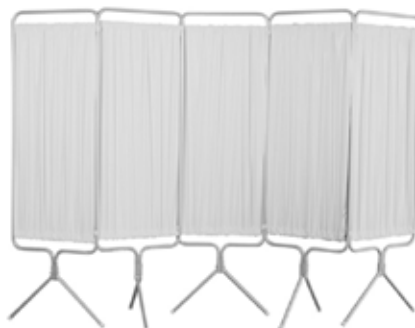

Privacy Screens



Phlebotomy Chairs



Specialty Chair Transfer Chairs



Stools



Room Chairs

Visit us online at [www.wincomfg.com](http://www.wincomfg.com)



## LIMITED WARRANTY

• 5516 SW 1<sup>st</sup> Lane • Ocala, FL 34474  
 • Phone (352) 854-2929 • (800) 237-3377  
 • Fax (352) 854-9544  
 • www.wincomfg.com  
 • customerservice@wincomfg.com

### TERMS

*Winco Mfg., LLC. warrants this product to be free of manufacturer's defects in material and workmanship, provided that the product is used according to normal operating conditions and proper maintenance intended by manufacturer. This warranty is available only to the original retail purchaser, is non-transferable and commences on the date of retail sale; proof of purchase required.*

**Limited One Year Product Warranty:** Winco Mfg., LLC warrants the complete product for one (1) year. At Winco Mfg., LLC. sole discretion, it may repair or replace any components freight free that are found to be defective during the first year. *Winco Mfg., LLC. shall not be liable for any labor, or any other costs incurred as a result of or in conjunction with a warranty claim.*

**Limited Three Year Warranty:** Winco Mfg., LLC warrants recliner mechanisms, electrical components, vinyl panels and Vinyl on upholstered parts [from cracking or delaminating] pressurized gas springs, and casters, when new, for a period of three (3) years. At Winco Mfg., LLC. 's Sole discretion, it may repair or replace components found to be defective. *Winco Mfg., LLC. shall not be liable for any labor, shipping or any other costs incurred as a result of or in conjunction with a warranty claim.*

**Limited Lifetime Frame Warranty:** Winco Mfg., LLC warrants steel and aluminum base frames for all products, when new, for the lifetime of the original purchaser. This limited warranty does not apply to paint/finish or any components attached to the frame such as; upholstery, foam, casters, mechanisms or related parts that are covered under above warranties. *Winco Mfg., LLC shall not be liable for any labor, shipping or any other costs incurred as a result of or in conjunction with a warranty claim.*

The purchaser's exclusive remedy under this warranty shall be limited to such repair or replacement of defective components at Winco Mfg., LLC sole discretion. For warranty service, contact the dealer that the product was originally purchased from or Winco Mfg., LLC directly.

### EXCLUSIONS

There are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Winco Mfg., LLC and all other warranties, conditions, representations or guarantees including any warranties, conditions, representations or guarantees under any Sale of Good Act or Like legislation or statute is hereby expressly excluded. Any and all other implied warranties shall not extend beyond the duration of the express warranty. Liability for incidental or consequential damages is excluded to the extent permitted by law. Some states do not allow the exclusion or limitation so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights. In addition you may also have other rights, which vary from state to state.

### GENERAL PROVISIONS

No warranty herein contained or set out shall apply when damage or repair is caused by any of the following:

1. Damage in transit.
2. Accident, alteration, abuse or misuse of product i.e. exceeding weight capacities, applying inordinate pressure to footrest/leg rest, use in Mental Health facilities like institutions or, any unintended use of the product or use in unintended environments (i.e. outdoor, showers, MRI rooms, etc..)
3. Fire, water damage, theft, war, riot, hostility, acts of God.

*Examples contained in this list are not to be construed as all-inclusive.*



***Design, appearance, parts, & construction are subject to change without notice***